

Aastra 610d, 620d and 630d SIP DECT for MX-ONE™

Quick Reference Guide



EN/LZT 102 4164 R1C

© Copyright Astra Telecom Sweden 2012. All rights reserved.

Important User Information

Copyright

Copyright © Aastra Telecom Sweden AB 2012. All rights reserved.

No parts of this publication may be reproduced, stored in retrieval systems, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the publisher except in accordance with the following terms.

When this publication is made available on Aastra media, Aastra gives its consent to downloading and printing copies of the content provided in this file only for private use and not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Aastra will not be liable for any damages arising from use of an illegal modified or altered publication.

Trademark

Aastra is a registered trademark of Aastra Technologies Limited. All other trademarks mentioned herein are the property of their respective owners.

Disclaimer

While every effort has been made to ensure accuracy, Aastra will not be liable for technical or editorial errors or omissions contained within this documentation. The information contained in this documentation is subject to change without notice.

Declaration of conformity

Hereby Aastra Telecom Sweden AB, Box 42214, SE-126 STOCKHOLM declares that this product (s) is conformity with the essential requirements and other relevant provisions of the European Directive 1999/5/EC (R&TTE directive)

Details to found at www.aastra.com/sdoc



Limited Warranty (applicable for sales in USA, Canada)

- Aastra warrants this product against defects and malfunctions during a one (1) year period from the date of original purchase. If there is a defect or malfunction, Aastra shall, at its option, and as the exclusive remedy, either repair or replace the telephone set at no charge, if returned within the warranty period. If replacement parts are used in making repairs, these parts may be refurbished, or may contain refurbished materials. If it is necessary to replace the telephone set, it may be replaced with a refurbished telephone of the same design and color.
- If it should become necessary to repair or replace a defective or malfunctioning telephone set under this warranty, the provisions of this warranty shall apply to the repaired or replaced telephone set until the expiration of ninety (90) days from the date of pick up, or the date of shipment to you, of the repaired or replacement set, or until the end of the original warranty period, whichever is later. Proof of the original purchase date is to be provided with all telephone sets returned for warranty repairs.

Exclusion

- Aastra does not warrant its telephone sets to be compatible with the equipment of any particular telephone company. This warranty does not extend to damage to products resulting from improper installation or operation, alteration, accident, neglect, abuse, misuse, fire or natural causes such as storms or floods, after the telephone is in your possession.
- Aastra shall not be liable for any incidental or consequential damages, including, but not limited to, loss, damage or expense directly or indirectly arising from the customer's use of or inability to use this telephone, either separately or in combination with other equipment. This paragraph, however, shall not apply to consequential damages for injury to the person in the case of telephones used or bought for use primarily for personal, family or household purposes.
- This warranty sets forth the entire liability and obligations of Aastra with respect to breach of warranty, and the warranties set forth or limited herein are the sole warranties and are in lieu of all other warranties, expressed or implied, including warranties or fitness for particular purpose and merchantability.

Notes on safety

It is imperative to observe the following instructions when setting up, connecting and using the telephone.

- Place the charger cradle on a non-slip surface.
- Lay the connection cable so it cannot cause accidents!
- Please read Important instructions for using the battery on this page.
- Do not place the handset or the charger cradle
 - close to heat sources
 - in direct sunlight
 - next to other electrical devices
- Protect your telephone from moisture, dust, aggressive liquids and gases.
- Only use approved accessories.
- Only use the standard batteries 23-001059-00 or 23-001080-00 or as accessories the power batteries 23-001060-00 or 23-001081-00.
- Always switch off the handset before removing the battery
- Never
 - open the charger cradle or the handset (except for the battery compartment cover) yourself!
 - touch the plug contacts with pointed metallic objects!
 - carry the charger cradle by the connection cable!
- Only clean your telephone with a slightly moist cloth.
- Do not use your telephone in explosive areas.
- Do not use the Aastra 610d and 620d in wet rooms (e.g. bathrooms).
- Do not hold the handset up to your ear in handsfree mode or when the ringer is ringing as the volume can be very loud.
- This product's earcap region (at the front) and the loudspeaker region (at the rear) is slightly magnetic and may pick up metallic objects, such as staples or pins. Please check both regions for metallic object before use

Note for wearers of hearing aid

Before using the handset, users of hearing aids should note that radio signals can affect hearing aids and, if powerful enough, can cause an unpleasant buzzing sound.

Disposal of the product

Your product should not be placed in municipal waste. Please check local regulations for disposal of electronic products.



Important information about the batteries

The devices are powered by a Li-ion battery (both standard and power battery). It is vital that you read the safety regulations before using the battery for the first time. Keep these safety regulations and all instructions for use at hand for future reference.

- Dispose of used batteries according to the regulations for disposal of electronic products. Failure to heed any of the following precautions when using the battery can lead to overheating, fire and danger of explosion.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
- Never try to use the battery for the power supply of any device other than these handsets.
- Never use or leave the battery close to a naked flame.
- Never put the battery into a microwave oven, do not throw it into a fire and do not expose it to high temperatures by any other means.
- Never carry or store the battery together with electrically conducting objects (neck chains, pencil leads, etc.)
- Never attempt to open the battery, never modify it in any way or subject it to severe blows.
- Never immerse the battery in fresh or salt water.
- Never use or leave the battery in direct sunlight, in a vehicle parked in blazing sunlight or in any other location with high temperatures.
- If you ever notice liquid leaking out, unusual odour, build-up of heat, discolouration, deformation or any other abnormal condition when you use, charge or store the battery, remove the battery immediately from the handset and keep it away from naked flames.
- The battery fluid can damage your sight. If at any time battery fluid accidentally gets into your eyes, rinse your eyes immediately with clean tap water and contact a doctor.
- If the battery is to be used by children, make sure a responsible adult instructs the children in the precautions and proper handling, and make sure the children handle the battery correctly.
- If battery fluid accidentally gets onto your clothing or skin, rinse the affected place immediately with pure tap water. Prolonged contact with battery fluid can lead to skin inflammation.

Precautions during use

- The battery is designed for use with these handsets only.
- Only use the charger cradle supplied for charging.
- A new battery is not charged so you need to charge it before using for the first time.
- Using the battery in a cold environment can shorten the expected operating life of a full charge. Charge the battery at a location with a temperature between 10° C and 35° C. Charging outside this temperature range can lead to a longer-than-usual charging time or even to failure of the charging process.
- An extremely short operating time after a full charge indicates that the lifetime of the battery has expired. Replace the battery.
- Never wipe the battery with thinners, benzene, alcohol, or other volatile substances, or chemically treated cloths. These can cause deformation of the battery and malfunction.
- If you need to send your handset with an installed li-ion battery or li-ion batteries separately, make sure you comply with the applicable laws and regulations with regard to the shipment of hazardous goods.


Aastra 610d, 620d , 630d

Quick Reference Guide

This Quick Reference Guide includes short descriptions on how to use the basic features. More features and technical requirements are available in the User Guide.

The complete User Guide is available in electronic format on the Enterprise Telephone Toolbox CD and on www.aastra.com (see MX-ONE platform).

Read the safety instructions before use!

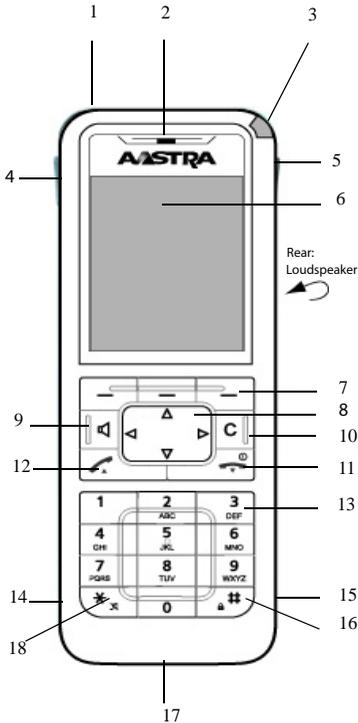

- 1 Aastra 630d: Emergency call key
- 2 Earpiece
- 3 LEDs
- 4 **Aastra 610d:** +/- key (volume adjustment)
Aastra620/630d: 3 side keys (programmable) and volume adjustment
- 5 Hotkey (programmable , not Aastra 610)
- 6 Display
- 7 3 softkeys (programmable in part)
- 8 Navigation keys (programmable in part)
- 9 Open listening/hands-free mode
- 10 Delete key
- 11 Cancel key/power on/off key
- 12 Call key/consultation key
- 13 Number/letter key
- 14 Headset connection
- 15 IMini USB connection (not Aastra 610d)
- 16 Key lock
- 17 Microphone
- 18 Ringer on/off

Input Modes:

- * Switch between digit/letter and upper case/lower case

Note!

When digits are activated, you must do a long press for the 2nd * key to be inputted.
(example: *23*long press)

Switch On and Off

- Switch on: Press and hold  until the display lights
- Switch off: Press  briefly, select switch off and press Ok
- Confirm Switch off
- Select **YES**

Answer Calls

Do not hold the handset up to your ear in handsfree mode as the volume can be very loud

- Answer: Press 
- or
- Press  and select from options:
- Accept
- Reject
- Add to (the call number will be transferred to the personal phone book, the call filter or the VIP list)
- Headset: Press the answering button on the headset.
- Call pick-up: Call ringing extension  **8**
- France and New Zealand: Press **4**;
Sweden: Press **6**
- Group call pick-up: *** 8 #** 
- Finland and Sweden: Press *** 0 #**;
U.S.A. and Canada: Press *** 59 #**
- End call: Press 
- Reject call: Press **Reject** softkey

Make Calls

- Pre dial: Dial extension number or external line and number Press 
- Dial from Personal Directory: In idle mode press 
- or
- Select entry with navigation keys
-  
- Press  for different call numbers belonging to the name
- Press 
- Dial from Corporate Directory: In idle mode press 
- Enter the first letter of name
- Press OK
- Select entry with navigation keys
-  
- Press OK
- Press 

Make Calls

Dial by caller list: *In idle mode press* 
(received and missed calls) *Select Caller list*

Select name or number by pressing
 

The following symbols indicate the respective call type:

 *Received, answered call*

 *Missed call*

 *Rejected call*

 *Filtered call*

 *Forwarded call*

 *SOS call*

 *Call with automatic accept*

Press  *to set up the call*

Dial from Redial list: *In idle mode Press*  *Long*

Select name or number by pressing

Redial last external number: *** * *
Finland and Sweden: *Press * * 0*

Silent Ringing and Mute

Switch ring signal off/ *Press * long*
on in idle mode

Symbol  *will appear on the display when switched off*

Silent Ringing and Mute

Switch ring signal off during calling: *Press **C** key to suppress the ringing.*

Mute microphone during call: *Press softkey* 

Volume and Ringing

Adjust speaker volume during a call: *For **Aastra 610d**: Press the volume +/- button on the side of the phone*

*For **Aastra 620d, 630d**: Press the upper/lower sidekeys (press long if the keys are programmed).*

Adjust ringing and volume in idle mode: *Press* 
*Select **Audio - Ringer settings/ Volume***

Callback

(When you receive a busy tone)

Order: *Press **6** (remote subscriber will call back when disengaged)*

*France, New Zealand and Sweden: Press **5***

Cancel all callbacks: ***# 37 #***  

*U.S.A. and Canada: Press **# 6 #***

Cancel single callback: ***# 37 * extension number #***
 

*U.S.A. and Canada: Press **# 6 ****

Intrusion

(Intrude a busy extension to ask the party to hang up.)

Activate: *Press **4***
*France, New Zealand and Sweden: Press **8***

Bypass

(Bypass Follow-me on a specific extension.)

Activate: **** 60 * desired number #*** 
*U.S.A. and Canada: Press *** 1 ****

Inquiry

(The first call is parked automatically.)

Ongoing conversation: Press  softkey

or

Press 

Dial number

or

Press  /  

Press  and select from list

-Central directory

-Personal directory

-Redial list

-Caller list

Press 

Refer back: Press **2**

Sweden: Press **R**

On hold

Put on hold: Press  

Call resumed: Within 30 sec

Resume a call on another extension: Call the extension where call was put on hold. Press  **8**

France and New Zealand: Press **4**;

Sweden: Press **6**

Conference

Ongoing conversation: Press  softkey

Dial number

At answer, press **3** - Conference Repeat to add more.

Transfer

Ongoing conversation: Press  softkey
or

Press 

Dial number

Before or after answer Press 

Transfer from Bluetooth headset to phone (Aastra 620d, 630d): Press softkey  and select **Transfer BT to handset**

Note: Bluetooth is optional, see the User Guide for more information.

Call Forwarding

Follow-me

Order from your extension: Press softkey  long

Select **Server menu- FollowMe**

Enter extension number and Press **OK**

or

*** 21 *** extension number **#**

U.S.A and U.K.: Press *** 2 ***

Cancel: Press softkey  long

Select **Server menu**

or

21#  

U.S.A and U.K.: Press **# 2 #**

Call Forwarding

External follow-me

Order: Press softkey  long
 Select **Server menu- Ext.Follow Me**
 Enter external line code and number and press **OK**
 or
 Press *** 22 #** External line code and number **#**  
 U.S.A. and Canada: Press *** 23 #**

Cancel: Press softkey  long
 Select **Server menu**
 or
22 #  
 U.S.A. and Canada: Press **# 23 #**

Personal Number

Order or change to another profile from own extension: *** 10 * (1-5) #**  
 Search profile digits (1-5), are programmed by system administrator.

Cancel: **# 10 #**  

Voice Mail (Optional)

New voice mail message received: A new voice mail message 
 Press 
 Select **Voice box**
 or
 Press 
 Select **info-Voice box**

Text Messages

(You can send and receive text messages to and from other phones in the system.)

Confirmation of text message: When receiving a text message message:

Press softkey **Read**

The message is saved to your text message inbox

Read message: Press  select **Text messages**
 or

Press  select **Info**

Write and send text message:

In idle mode Press 

Select **Text messages - New message**

Confirm with softkey **OK**

Enter the text message

Press softkey **Next**

Enter address

or

Press  and select from directory/list

Press softkey **Send**

Choose the kind of message

Press softkey **OK**

Personal Directory

Add/edit new entry: Press navigation keys ▼

or

Press softkey 

Select **Directories -Personal directory**

If the phone book is empty press softkey **New**

If entries already exist, press softkey  select **New entry**

Enter phone book details and confirm with softkey **OK**

Press softkey  to save the phone book entry.

New entry from caller list:

Press  Select entry from **caller list**

Press softkey  select **Add to**
Enter entry details

Confirm with softkey **OK**

Press softkey  to save

Personal Directory

Edit Phone book details: Press navigation key ▼

or

Press softkey 

Select **Directories -Personal directory**

Press softkey  select **Edit**

Edit entries by moving cursor to the number/letters with the keys 
 press **C** to delete. Confirm input with **OK**.

Press softkey  to save the the phone book entry.

Delete entry: Select **entry**

Press  select **Delete** and **OK**

Confirm with **OK**

Account Code

Activate:

*** 61 *** account code # 
external number

Norway and Finland: Press *** 71 ***

Presence

Order absence reason: Press softkey  long

Select **Server menu-Presence**

Select reason for absence and enter time/date for return

Press **OK**

or

*** 23 *** absence code (0-9)

Enter time or date (if requested)

U.S.A. and Canada: Press *** 24 ***

Cancel: Press softkey  long

Select **Server menu**

or

23 #  

U.S.A. and Canada: Press **# 24 #**

General Deactivation

Cancel all features:

001 # 

U.S.A. and Canada: Press **# 0 #**

Display Language

Change display language:

Press softkey 

Select **Settings - Display - Language**

Select language.

Press softkey  to save

Time/Date/Format

Set time, date and format:

Press softkey 

Select **Time/Alarms**

Change values of time, date (and alarms, appointment) by pressing

Press softkey  to save

Program Soft Keys and Hotkey

Softkeys:

Press softkey 

Select **Settings - Key programming**

Press the key to be programmed

Select function from the list

Press softkey  to save

Hotkey/VIP list (620d, 630d): Press the **Hotkey** briefly to be programmed.

Press softkey **New**

You can specify further numbers

Press  and select **New entry**

Profiles

Select profile:

Press  select **Profiles-Select**

Press softkey  to save

Make changes of the profiles:

Press  select **Profile-Settings**

Adjust the settings for the chosen profile

Leave the menu with **Esc**

Bluetooth (Aastra 620d, 630d)

Subscribe headset: Switch the bluetooth headset to "Pairing mode" (see user's manual for the bluetooth headset)

Press softkey **»»»** and select **Settings - Bluetooth- BT Status**

Press **Change** to switch bluetooth on

Select **Subscribe headset**

Press **New** to register a new Bluetooth headset.

The handset searches for BT devices for approx 30 sec.

Confirm the found headset with **OK** and enter PIN of the headset.

Status: Press **»»»** select **Settings- Bluetooth-BT Status**

Press **Change** to switch Bluetooth on or off

Inserting standard battery

Aastra 610d, 620d:

Push the battery cover downwards until it disengages from the locking mechanism and lift off. Insert the battery with contacts downwards. Replace the battery cover and push upwards until it snaps into place



Aastra 630d:

Undo the two screws on the back of the handset with a suitable tool and remove the cover. Insert the battery with the contacts downwards, close the battery compartment with the cover (insert underneath, press down from above) and screw back in place. Do not damage the rubber seal when assembling



Connecting the charging unit

Aastra 610d, 620d: This handset can be used without any changes to the charger cradle.

Aastra 630d: To use this handset, you must remove the two lateral guides in the charger cradle. They are easy to lift on the inside edge using a fingernail or a paper clip.



The plastic guides can also be removed, by pushing a suitable screwdriver into the slits on the bottom of the charger.



Connect the plug-in power supply to the charger cradle and place the connection cable through the cable guide. Place the charger cradle on a non-slip surface. Change the plug of the power supply unit if necessary.

Power Supply / Power unit

The power supply unit is designed for 100V to 240V AC (50-60 Hz). It is supplied with four change adapters enabling virtually worldwide use. Where necessary, connect the plug normally used in your country to the power supply unit. There are two versions of the plug-in power supply unit that are connected slightly differently:

Version 1: Set the switch on the power supply unit to OPEN and push out the existing plug upwards.

Then insert the new plug required into the power supply unit and lock it with the switch (LOCK).

Version 2: Remove any existing plug by pressing OPEN. Then insert the required new plug into the power supply unit at a slight angle with the label TOP upwards. Press downwards until it snaps into place

Accessories

The following accessories are available:

Aastra 610d, 620d, 630d/Charger with international AC-Adapter

Aastra 610d / Handset

Aastra 620d / Handset

Aastra 610d / Handset

Aastra 620d, 630d / Power-Battery-Pack

Aastra 620d / Cover for Power Battery Compartment

Aastra 630d / Cover for Power Battery Compartment

Aastra 610d, 620d / Rotary-Belt Clip

Aastra 610d, 620d / Leather Pouch

Aastra 630d / Leather Pouch

Neck Band Aastra 610d, 620d, 630d with Neck Band holder for Aastra 630

Aastra 620d,630d/MicroSD-card

Aastra 630d/Rotary-belt clip

Charger Rack Aastra 610d, 620d, 630d with 8 charger cradles

General information

FCC Statement (U.S. only)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Modifications not expressly approved by this company could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals:

The wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF

energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This EUT has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE 1528-2003.

Industry Canada (Canada only)

Operation of this device is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Privacy of communications may not be ensured when using this telephone.

Exposure to Radio Frequency (RF) Signals:

The wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy set by the Ministry of Health (Canada), Safety Code 6. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population. These guidelines are based on the safety standards previously set by international standard bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment / general public exposure limits specific in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement procedures specified in IEEE 1528-2003.

Declaration of conformity

Hereby Aastra Telecom Sweden AB, Box 42214, SE-126 STOCKHOLM declares that this product (s) is conformity with the essential requirements and other relevant provisions of the European Directive 1999/5/EC (R&TTE directive)

Details to found at www.aastra.com/sdoc



Please also use the other documentation that was supplied with the parts of your telephone system.

Subject to change without prior notice.
For questions regarding the product,
please contact your Aastra Certified Sales Partner.
Also visit us on www.aastra.com

© Aastra Telecom Sweden AB 2012. All rights reserved.
EN/LZT 102 4164 R1C

Printed on chlorine free paper.